

CARD ENCODER

E3

User Manual

CARD ENCODER E3

Model :	E3
Dimensions :	70mm x 70mm x 26mm
Power interface :	Type-C USB
Power input :	5V/500mA
Radio frequency:	13.56Mhz
Support card type:	MiFare S50

Light/sound status



When the device is powered on:


- Green light: Card encoder mode
- Blue light: Card reader mode

Voice prompt on passing a card:

- 🔊 Success on encoding/reading a card:
One short beep

Issuing cards via PC

- 1 Connect the USB cable with PC
- 2 Plug the USB into the card encoder

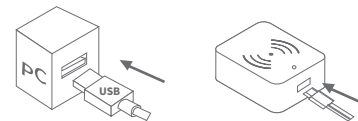

- 3 Install drive program for the card encoder

Limited Warranty

1. For any defect in material and/or workmanship, the original purchaser of the product can:
 - 1) Return or ask for a replacement within 7 days from the date of the Invoice.
 - 2) Ask for a replacement within 15 days from the date of the Invoice.
 - 3) Can ask for a free repair in 365 days from the date of the Invoice.
2. This warranty does not cover defects caused by modification, alteration, misuse or physical abuse of the product.

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.