

C-C



(The above drawing with figures is for installation, please cut down this drawing along the line.)



1. Not to adjust the gear shaft over 180 degree, otherwise, door closer will be damaged.
2. If regulate the gear by swinging arm to 180 degree, the gear will keep stopping.
And then the gear should return to original position immediately in order not to damage door closer in the next time.
3. The door closer has the automatically closing function. Better not to pull door by hand.

- Notice:** Not to turn out the adjustment screw from body surface, otherwise, it will be oil leakage and can not work anymore.